



# Theo Fitting Instructions

## Theo device

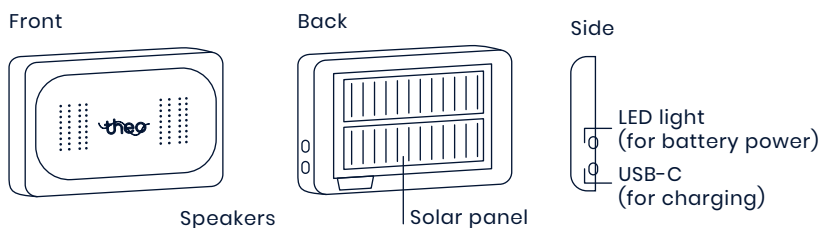


### Step 1

Pick your preferred location best suited to your car, where you will be fitting the Theo device.

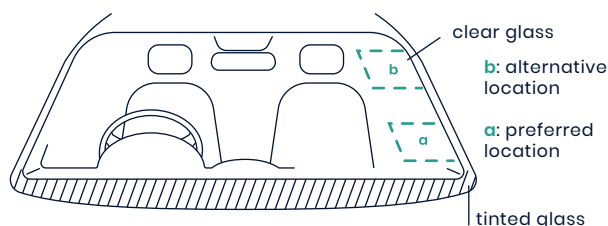


### Step 2

Use either a lint free cloth or kitchen towel to dry the area  
**The area must be clean and dry before installing the Theo device**

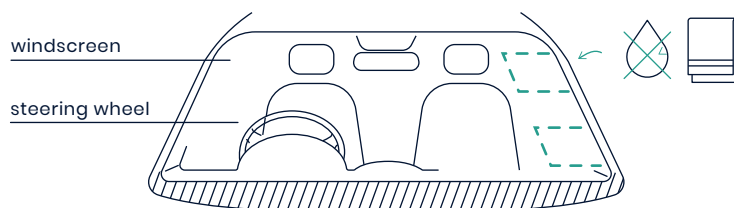


### Step 3

Pull the plastic tag completely out from the Theo device  
**Warning: Only remove immediately prior to installation**

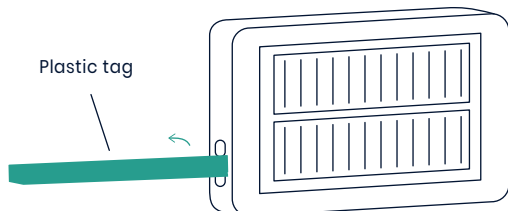


### Step 4

Peel off the 3M plastic film from the back of the Theo device.  
**Do not pull the foam away from the device**

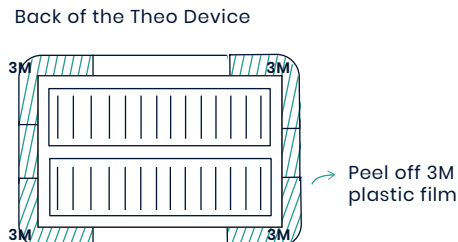

### Step 5

Stick the windscreen cradle horizontally against the windscreen inside the car in the cleaned and dry area shown.  
Please ensure that the area is clear glass and not tinted glass.

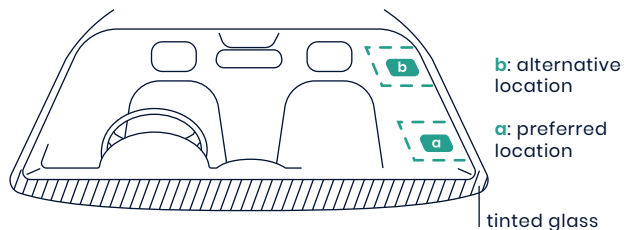

### Step 6

Push the device firmly against the windscreen, applying hard pressure for at least 20 seconds to ensure the theo is solid.

**Press hard on all 4 corners and the vertical sides**



## To complete your policy

Take a photo from the outside of the car showing the device fitted and number plate of the car, all visible in one photo.



We'll email and SMS you a unique photo upload link